

REVISIONS

SERVICE GUIDE 912

(1)

Pages:

Title Page, E Table of Contents

E 5, E 9, E 10, E 15, E 16, E 29 - E 36, E 47 - E 54,  
E 57 - E 61, E 63 - E 84, E 87 - E 92, E 95 - E 98,  
E 101, E 102.

F Table of Contents,

F 3 - F 8, F 11, F 17, F 18, F 23 - F 26, F 29, F 30.

Please insert the above pages into the appropriate groups of the 912 Service Guide, discarding obsolete pages where appropriate.

Printed in Germany

Dr. Ing. h. c. F. Porsche KG  
February 1967

# INTRODUCTION

TO THE PORSCHE FOREMAN AND MAINTENANCE TECHNICIAN

As you already know, there is great similiarity between the 912 and 1600 SC engine. Thus you will find many familiar instructions in this Service Guide for the 912 engine.

Chassis design of the 912 Porsche is basically the same as that of the Type 911. Consequently, you may apply the workshop manual for the Type 911, in combination with this Service Guide for the 912 engine, to the 912 Porsche as well.

The choise of arranging your Porsche manuals is being left to your discretion. You may remove from your 911 Workshop Manual the chapter dealing with the 911 engine and replace it with this Service Guide for the 912 engine, thus having a complete 912 Workshop Manual; you may supplement your 911 Workshop Manual with this Service Guide for the 912 engine to have both types in a single book; or you may retain your 911 Workshop Manual and this Service Guide for 912 engines in separate books to have ample space in each book for the inclusion of notes and supplements.

All pages of this Service Guide for the 912 engine have been marked "912" to preclude misfiling.

The procedures, tool application and identification have, of course, been adopted from the 911 Workshop Manual.

We hope that this Service Guide for the 912 engine will aid you in your efforts to skilfully service all Porsche cars.

DR. - ING. h. c. F. PORSCHE KG.

Auto Books

# SERVICE GUIDE

# 912

**DR. ING. h.c. F. PORSCHE KG  
STUTT GART-ZUFFENHAUSEN**

Subject to Changes

Edition 1966

Printed in Germany

Printing No. W 321

Technical Stage as of September 1966

All rights reserved



by Dr. - Ing. h. c. Ferdinand Porsche

Stuttgart 1966

GARY L. COOPER  
16591 TIBER LANE  
HUNTINGTON BEACH, CALIF.

# ASSEMBLY GUIDE



**DR. ING. h.c. F. PORSCHE KG  
STUTTGART-ZUFFENHAUSEN**

Subject to Modification

Edition 1966

Printed in Germany

Printing No. W 321

Technical Stage as of September 1966

All rights reserved



by Dr. - Ing. h. c. Ferdinand Porsche

Stuttgart 1966

CONTENTS

---

GROUP E: ENGINE AND CLUTCH

Engine Assembly

Engine Serial Number, location .....	E 1
Cylinders and Main Bearings, numerical designation .....	E 2
Engine, cross-sectional view .....	E 3
Engine, description .....	E 4

Service Operations:

1 En Engine, removing and installing .....	E 8
2 En Engine, disassembling and reassembling .....	E 10

COOLING SYSTEM

Service Operations:

3 En Cooling Air Shrouds, removing and installing .....	E 18
4 En Cooling Blower Housing, removing and installing .....	E 21
5 En Cooling Blower, removing and installing .....	E 23
6 En Cooling Blower Impeller, removing and installing .....	E 24
7 En Air Hose Connecting Duct, removing and installing .....	E 25
8 En LowerDuct with Air Gates (Export), installing .....	E 26
9 En Air Gate Assembly (Type 356B/T6), installing .....	E 26
10 En V-belt Tension, checking .....	E 27
11 En V-belt Tension, adjusting .....	E 27

EXHAUST AND HEATING SYSTEM

Heating System, Type 356B/T6, description .....	E 29
Heating System, Export, description .....	E 32

Service Operations:

12 En Exhaust Muffler (with 356B/T6 heater), removing and installing .....	E 34
13 En Heat Exchanger and Exhaust Pipe (with 356B/T6 heater), removing and installing .....	E 35
14 En Exhaust Muffler (with Export heater), removing and installing .....	E 36
15 En Heat Exchanger and Exhaust Pipe (with Export heater), rem. and inst. ....	E 36
16 En Heater Control Cable, removing and installing .....	E 37
17 En Control Lever Assembly, disassembling and reassembling .....	E 38

ENGINE LUBRICATION SYSTEM

Oil Circuit, diagram .....	E 39
Oil Circuit, description .....	E 40

Service Operations:

18 En Oil Strainer, removing and installing .....	E 41
19 En Oil Pressure Relief Valve and Bypass Valve, removing and installing .....	E 42
20 En Oil Cooler, removing and installing .....	E 44
21 En Oil Pump, removing and installing .....	E 45

22 En	Bypass Oil Filter, changing cartridge .....	E	46
-------	---	---	----

## CYLINDER HEADS AND VALVES

### Service Operations:

23 En	Rocker Arm Carrier, removing and installing .....	E	46
24 En	Rocker Arm Carrier, disassembling and reassembling .....	E	48
25 En	Cylinder Heads, removing and installing .....	E	49
26 En	Valve Springs, removing and installing .....	E	51
27 En	Valve Guides, checking for wear .....	E	52
28 En	Valve Seats, checking and reconditioning .....	E	53
29 En	Valves, refacing .....	E	54
30 En	Valves, seating .....	E	55
31 En	Valves, inspecting .....	E	55
32 En	Valves, testing for leakage .....	E	55
33 En	Valves, adjusting clearance .....	E	56
34 En	Valve Timing and Clearance, checking .....	E	57
35 En	Cylinder Heads, reconditioning and exchange .....	E	58

## CYLINDERS AND PISTONS

### Service Operations

36 En	Cylinders, removing and installing .....	E	59
37 En	Cylinders, inspecting .....	E	60
38 En	Pistons, removing and installing .....	E	61
39 En	Pistons, inspecting .....	E	64
40 En	Piston Size Table .....	E	65

## CRANKCASE

### Service Operations:

41 En	Crankcase, disassembling and reassembling .....	E	66
42 En	Distributor Pinion Shaft, removing and installing .....	E	69
43 En	Oil Seal at Bearing 4, removing and installing .....	E	70
44 En	Bearing 4, removing and installing .....	E	71
45 En	Timing Gear Cover, removing and installing .....	E	72
46 En	Flywheel, removing and installing .....	E	73
47 En	Crankshaft Pulley, removing and installing .....	E	75
48 En	Oil Seal at Flywheel, removing and installing .....	E	75
49 En	Camshaft, removing and installing .....	E	76
50 En	Crankshaft with Connecting Rods, removing and installing .....	E	77
51 En	Connecting Rods, removing and installing .....	E	78
52 En	Connecting Rod Bushings, installing .....	E	79
53 En	Connecting Rods, measuring and realigning .....	E	79

## CRANKSHAFT

### Service Operations:

54 En	Crankshaft (plain-bearing), disassembling and reassembling .....	E	80
55 En	Crankshaft End Play, checking and adjusting .....	E	81
56 En	Crankshaft, reconditioning .....	E	83
	Crankshaft Journal and Bearing Dimensions .....	E	83

## CLUTCH

Clutch Description ..... E 87

### Service Operations:

57 En	Clutch, removing and installing .....	E 88
58 En	Clutch Disc, inspecting .....	E 89
59 En	Clutch Assembly, inspecting .....	E 90
60 En	Clutch, adjusting .....	E 91
61 En	Clutch Free Play, adjusting at clutch lever .....	E 91
62 En	Clutch Free Play, adjusting at clutch pedal .....	E 91
63 En	Clutch Pedal Travel Limiter, checking and adjusting .....	E 92
64 En	Clutch Cable, removing and installing .....	E 93
	Clutch Service Diagnosis .....	E 94
	Tolerances and Wear Limits .....	E 95
	Torque Values for Bolts and Nuts .....	E 105